


POS-80 Printer

Run the program **Race_slip_printer_driver_setup**

We then need to make some small changes in windows printers.
Select POS-80 and click Manage

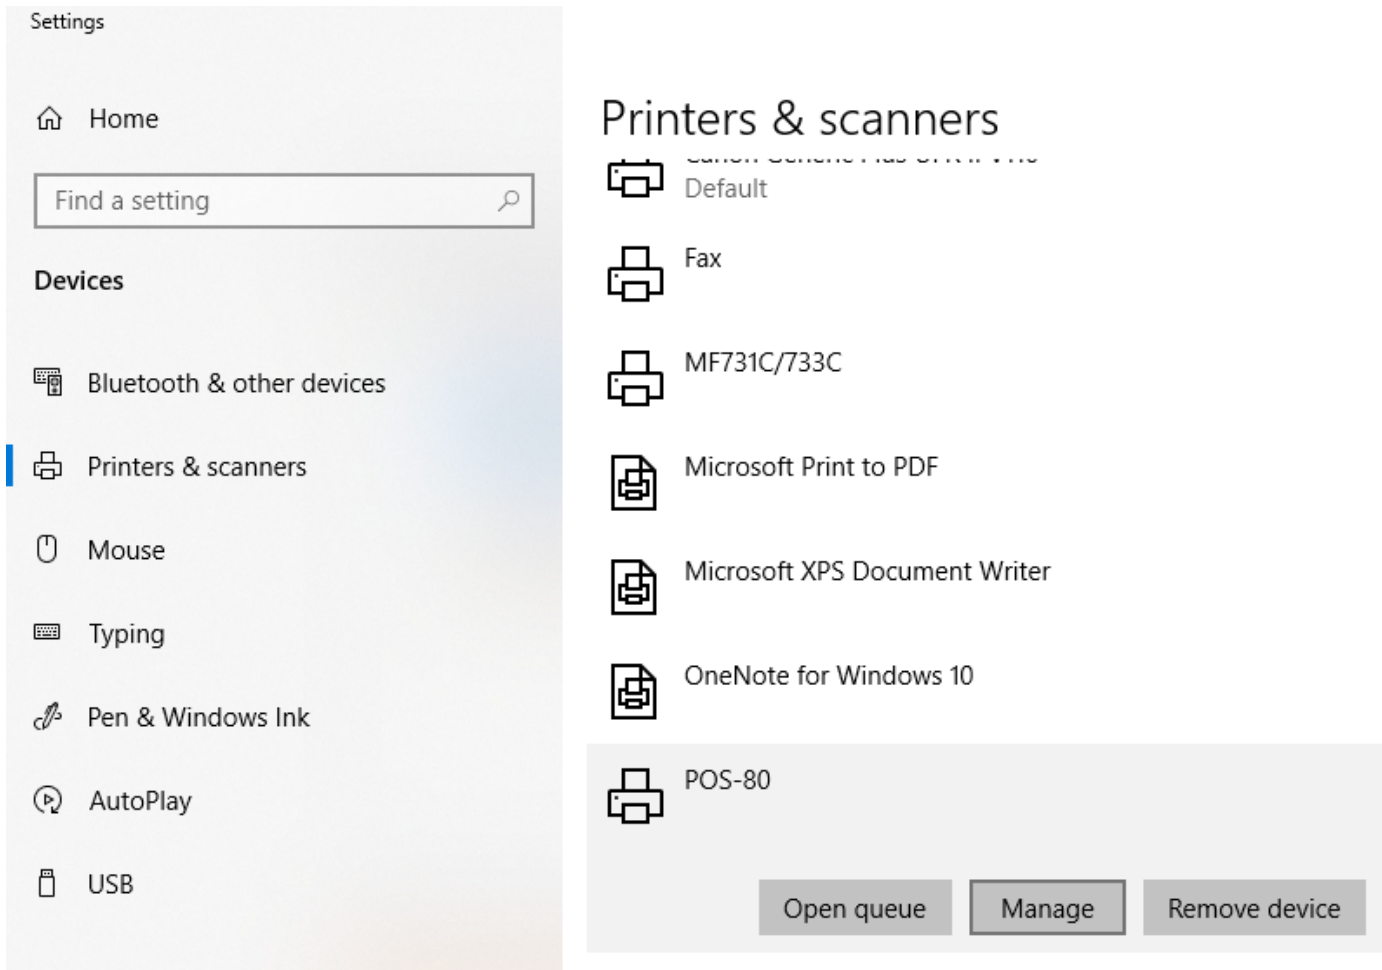

🏠 POS-80

Manage your device

Printer status: Idle

Open print queue

Set as default

[Print a test page](#)


[Run the troubleshooter](#)

Printer properties

[Printing preferences](#)

[Hardware properties](#)

 [Get help](#)

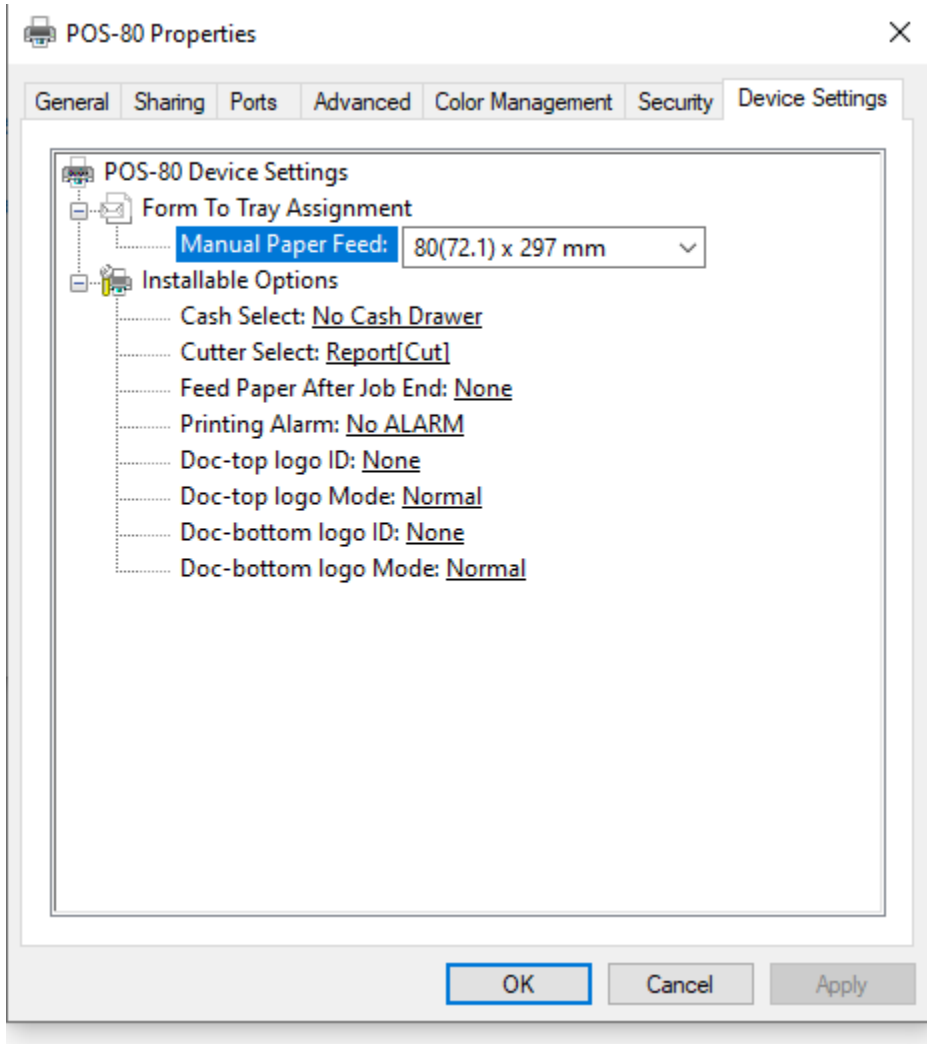

Change Cutter Select to **Report[Cut]**

Track	Tree	Staging	Random Tree Start Delay	LED Display	Display/Print
Printing					
POS-80 <input type="text"/> Time Slip Printer					
1 <input type="text"/> Number Of Copies					
9 <input type="text"/> Number of Line Feeds					
10 <input type="text"/> Font Size					
Canon Generic Plus UFR II V110 <input type="text"/> Regular Printer					
4 <input type="text"/> Number of Decimal places					

OK

Select printer in Trackmate software

Always plug printer in same USB port or it will not work. I recommend labeling the USB port.

Under main menu>preferences you may choose to auto printer after each run.