
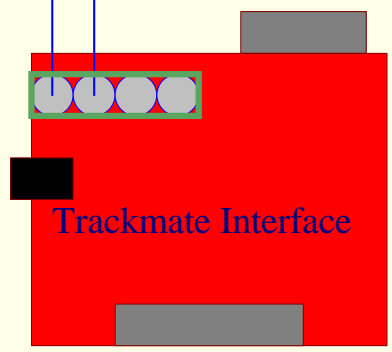


-> To Driver Station #4
-> To Driver Station #3
-> To Driver Station #2

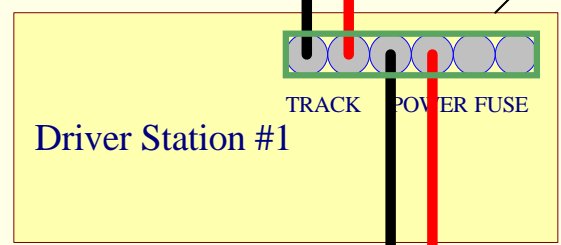

86 85

TRACK POWER FUSE

Terminal connections on underside of panel