



POWER SUPPLY TR3010B TR3005B

Important! Output LED must be on, to get power to your track. Simply push output button to turn on the output LED.

Voltage Adjustment: Turn knob to adjust, push adjustment knob in momentarily to switch between fine and coarse adjustment.

Current Adjustment: For slot cars, adjust to maximum current. Turn the current knob clockwise until 10amps (5 amps for TR3005) is displayed.

CV & CC Leds: Normally the CV Led will be on and the CC Led will be off. CC Led may come on momentary under heavy loads that exceed the current limit of the power supply or current adjustment. If you see the CC LED come on, check that you have current adjustment set to maximum.

Fan: Fan will only come on when required.